

SETTING UP CUSH ARMLESS

1 Unbox all parts

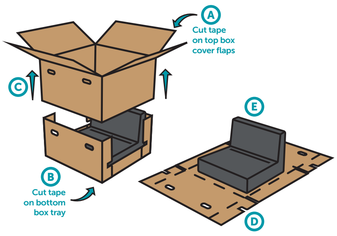

(A) Cut tape sealing top box flaps.
(B) Cut tape on bottom of box tray.
(C) Lift top box straight up and off the bottom tray.
(D) Unfold bottom tray so it lays flat.
(E) Remove Cush Insert from packaging by sliding out bottom tray.


2 Screw in Feet

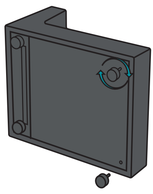

Screwing in Sticky Feet before covering will prevent hook-and-loop strips from sticking to carpeting.


Carefully tip Armless Seat on side to access bottom. Screw Sticky Feet into foot anchors.

3 Position Cover on Frame

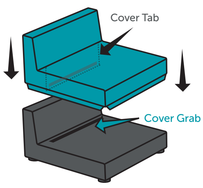

Locate Armless Cover. Begin by sliding the back of the Armless Seat Frame Cover over the Seat Frame Back, leaving access to the Cover Tab.


4 Pull Cover Tab through Cover Grab

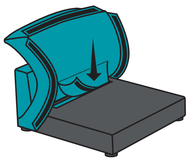

Slide Cover Tab through Cover Grab located between the Back and Base of the Seat Frame. This helps tighten the Cover around the Frame.


Cover Tab: Fabric panel on bottom of Cover.
Cover Grab: Opening between Seat Back and Seat Base.

5 Tighten & Secure Cover

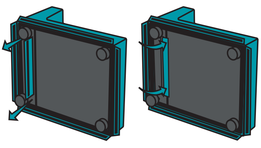


Carefully tip Armless Seat on side. Pull Cover Tab through Cover Grab. Connect hook-and-loop strips to bottom of Seat Frame Base.

6 Finish Covering

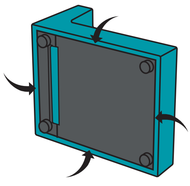


Pull remaining lose edges tight and connect hook and loop strips around the Seat Frame Bases for a smooth, secure fit.

7 Cover Back Pillow

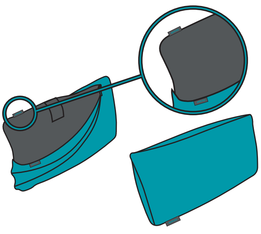


Back Pillows are labeled to help pair with their matching Covers. Locate the label on the bottom of the Naked Back Pillow or Seat Cushion and the Cover. Make sure both labels are on the same side when covering.


8 Cover Seat Cushion

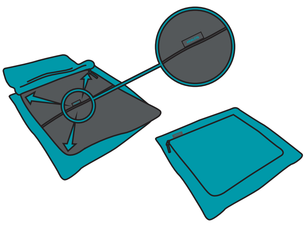

Cushions are labeled to help pair with their matching Covers. Cush's 9-chamber Seat Cushion design keeps Ultraloft™ fill in place. Give the Seat Cushion a good shake and fluff to maximize its loft. Tuck Seat Cushion into corners of Cover and zip shut.

9 Configure Cush

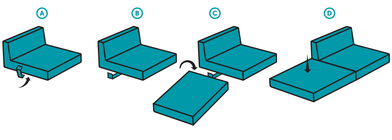


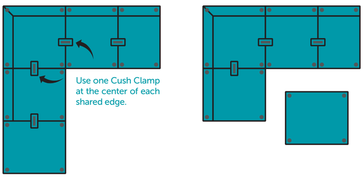

Cush Sticky Feet and Cush Clamps work together to keep connected Seats and Ottomans from moving apart.

(A) Center Cush Clamp along the edge where two pieces will connect. Hold it upright on its narrow edge and slide one end underneath the first Seat or Ottoman.
(B) Rotate Cush Clamp flat with the felt side facing down, leaving half of the Cush Clamp exposed.
(C) Lift the next Seat or Ottoman being added, position over the exposed half of the Cush Clamp, and slowly lower into place.
(D) Press down firmly on the added piece to secure the connection.


10 Add Seat Cushions and Back Pillows

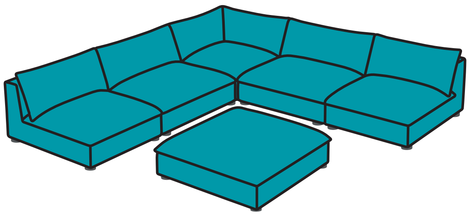

Add Seat Cushions first, then Back Pillows. Enjoy your Cush!


SETTING UP CUSH CORNER

1 Unbox all parts

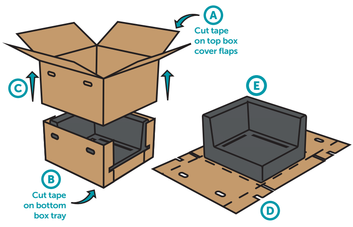

(A) Cut tape sealing top box flaps.
(B) Cut tape on bottom of box tray.
(C) Lift top box straight up and off the bottom tray.
(D) Unfold bottom tray so it lays flat.
(E) Remove Cush Insert from packaging by sliding out bottom tray.


2 Screw in Feet

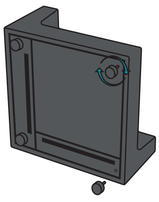

Screwing in Sticky Feet before covering will prevent hook-and-loop strips from sticking to carpeting.


Carefully tip Cush Corner on side to access bottom. Screw Sticky Feet into foot anchors.

3 Position Cover on Frame

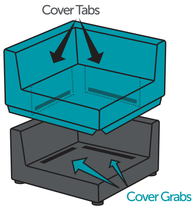

Locate Corner Cover. Begin by sliding the Corner Cover over the Naked Corner Seat Frame Back, leaving access to the Cover Tab.


4 Pull Cover Tab through Cover Grab

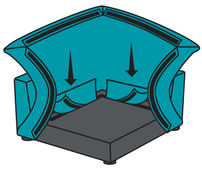

Slide Cover Tab through Cover Grab located between the Back and Base of the Seat Frame. This helps tighten the Cover around the Frame.


Cover Tab: Fabric panels on bottom corners of Cover.
Cover Grab: Opening between Seat Back and Seat Base.

5 Tighten & Secure Cover

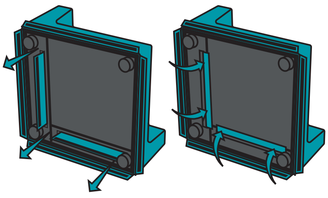


Carefully tip Cush Corner on side. Pull Cover Tab through Cover Grab. Connect hook-and-loop strips to bottom of Seat Frame Base.

6 Finish Covering

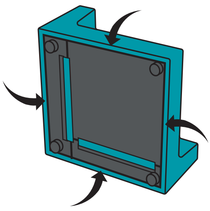


Pull remaining lose edges tight and connect hook and loop strips around the Seat Frame Bases for a smooth, secure fit.

7 Cover Back Pillow

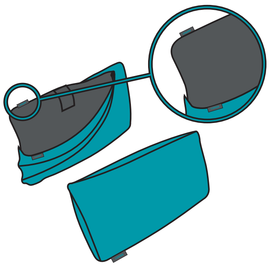

Back Pillows are labeled to help pair with their matching Covers. Locate the label on the bottom of the Naked Back Pillow or Seat Cushion and the Cover. Make sure both labels are on the same side when covering.


8 Cover Seat Cushion

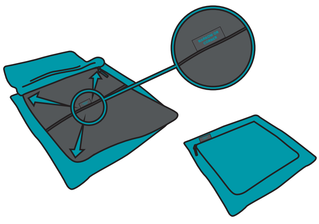


Cush Corner and Cush Narrow Armless have the same size Seat Cushion

Cushions are labeled to help pair with their matching Covers. Cush's 9-chamber Seat Cushion design keeps Ultraloft™ fill in place. Give the Seat Cushion a good shake and fluff to maximize its loft. Tuck Seat Cushion into corners of Cover and zip shut.

9 Configure Cush

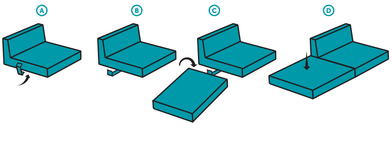


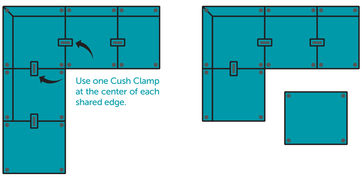

Cush Sticky Feet and Cush Clamps work together to keep connected Seats and Ottomans from moving apart.

(A) Center Cush Clamp along the edge where two pieces will connect. Hold it upright on its narrow edge and slide one end underneath the first Seat or Ottoman.
(B) Rotate Cush Clamp flat with the felt side facing down, leaving half of the Cush Clamp exposed.
(C) Lift the next Seat or Ottoman being added, position over the exposed half of the Cush Clamp, and slowly lower into place.
(D) Press down firmly on the added piece to secure the connection.


10 Add Seat Cushions and Back Pillows

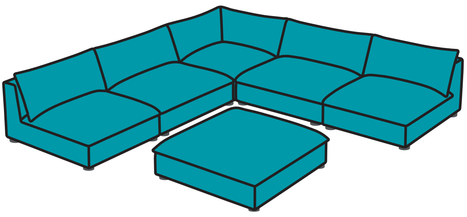

Add Seat Cushions first, then Back Pillows. Enjoy your Cush!


SETTING UP CUSH NARROW ARMLESS

1 Unbox all parts

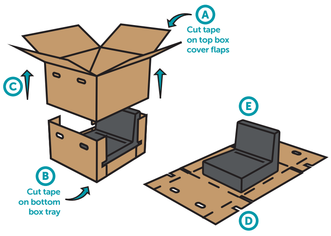

(A) Cut tape sealing top box flaps.
(B) Cut tape on bottom of box tray.
(C) Lift top box straight up and off the bottom tray.
(D) Unfold bottom tray so it lays flat.
(E) Remove Cush Insert from packaging by sliding out bottom tray.


2 Screw in Feet

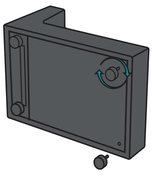

Screwing in Sticky Feet before covering will prevent hook-and-loop strips from sticking to carpeting.


Carefully tip Narrow Armless Seat on side to access bottom. Screw Sticky Feet into foot anchors.

3 Position Cover on Frame

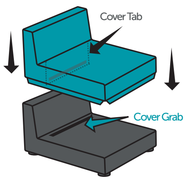

Locate Narrow Armless Cover. Begin by sliding the back of the Narrow Armless Seat Frame Cover over the Seat Frame Back, leaving access to the Cover Tab.


4 Pull Cover Tab through Cover Grab

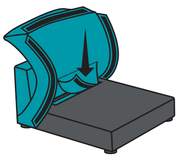

Slide Cover Tab through Cover Grab located between the Back and Base of the Seat Frame. This helps tighten the Cover around the Frame.


Cover Tab: Fabric panel on bottom of Cover.
Cover Grab: Opening between Seat back and Seat Base.

5 Tighten & Secure Cover

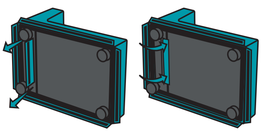


Carefully tip Narrow Armless Seat on side. Pull Cover Tab through Cover Grab. Connect hook-and-loop strips to bottom of Seat Frame Base.

6 Finish Covering

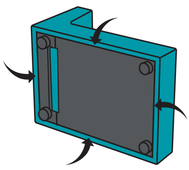


Pull remaining lose edges tight and connect hook and loop strips around the Seat Frame Bases for a smooth, secure fit.

7 Cover Back Pillow

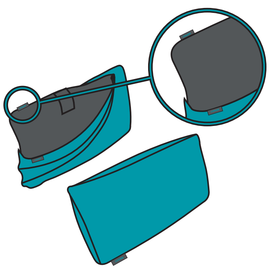

Back Pillows are labeled to help pair with their matching Covers. Locate the label on the bottom of the Naked Back Pillow or Seat Cushion and the Cover. Make sure both labels are on the same side when covering.


8 Cover Seat Cushion

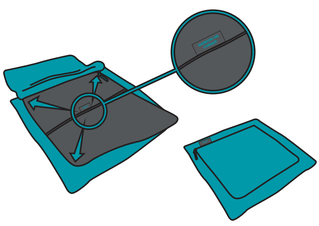


Cush Narrow Armless and Cush Corner have the same size Seat Cushion

Cushions are labeled to help pair with their matching Covers. Cush's 9-chamber Seat Cushion design keeps Ultraloft™ fill in place. Give the Seat Cushion a good shake and fluff to maximize its loft. Tuck Seat Cushion into corners of Cover and zip shut.

9 Configure Cush

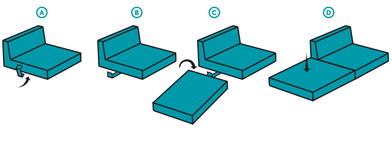


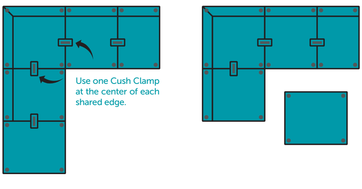

Cush Sticky Feet and Cush Clamps work together to keep connected Seats and Ottomans from moving apart.

(A) Center Cush Clamp along the edge where two pieces will connect. Hold it upright on its narrow edge and slide one end underneath the first Seat or Ottoman.
(B) Rotate Cush Clamp flat with the felt side facing down, leaving half of the Cush Clamp exposed.
(C) Lift the next Seat or Ottoman being added, position over the exposed half of the Cush Clamp, and slowly lower into place.
(D) Press down firmly on the added piece to secure the connection.


10 Add Seat Cushions and Back Pillows

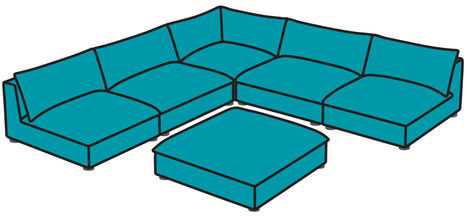

Add Seat Cushions first, then Back Pillows. Enjoy your Cush!


SETTING UP CUSH OTTOMAN

1 Unbox all parts

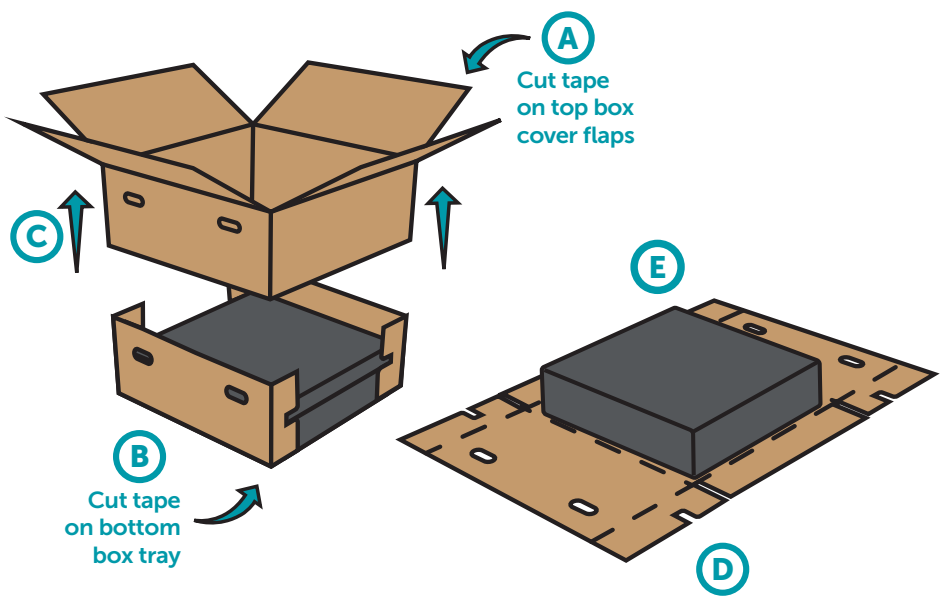

(A) Cut tape sealing top box flaps.
(B) Cut tape on bottom of box tray.
(C) Lift top box straight up and off the bottom tray.
(D) Unfold bottom tray so it lays flat.
(E) Remove Cush Insert from packaging by sliding out bottom tray.


2 Screw in Feet

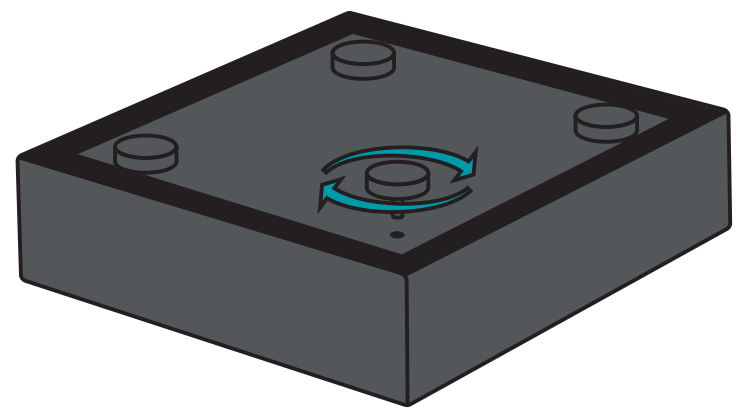

Screwing in Sticky Feet before covering will prevent hook-and-loop strips from sticking to carpeting.


Carefully flip the Ottoman Frame upside down. Screw Sticky Feet into foot anchors.

3 Begin covering Ottoman

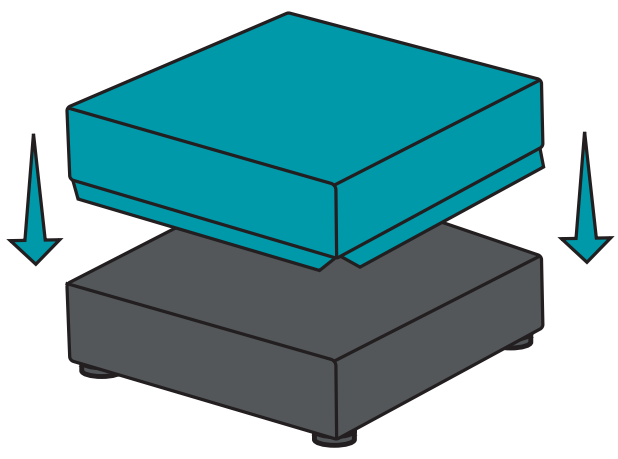


Locate Ottoman Cover. Begin by aligning the Cover seams and pull down evenly.

4 Flip over Ottoman

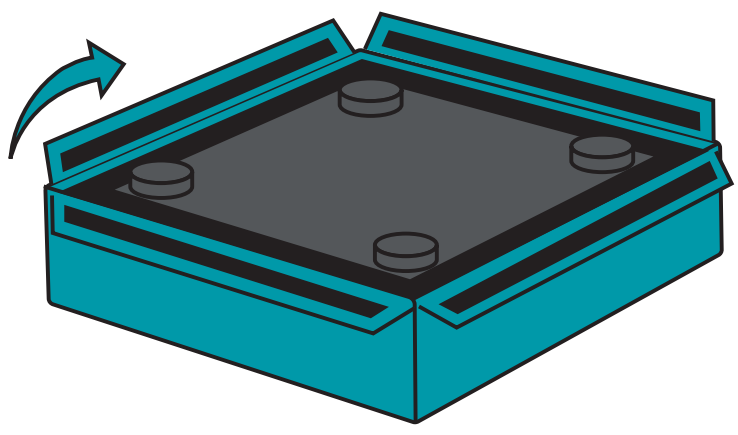


Carefully flip the Ottoman Frame upside down. Pull each corner tight so the Cover is wrinkle free.

5 Secure Cover Tab

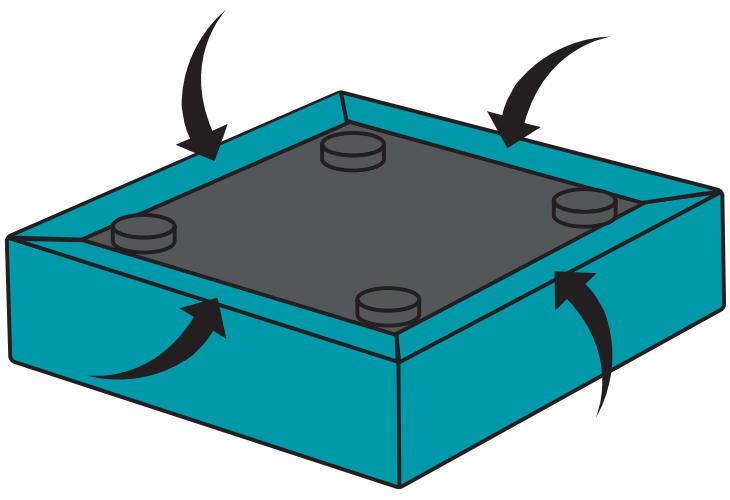


Connect hook-and-loop strips to bottom of Ottoman Frame.


6 Cover Ottoman Cushion

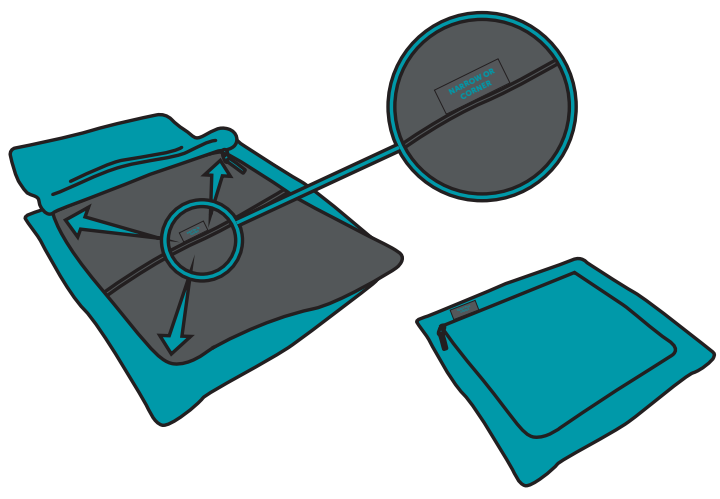


Seat Cushions are labeled to help pair with their matching Covers. Locate the label on the bottom of the Naked Seat Cushion and the Cover. Make sure both labels are on the same side when covering.
Cush's 9-chamber Seat Cushion design keeps Ultraloft™ fill in place. Give the Seat. Cushion a good shake and fluff to maximize its loft. Tuck Seat Cushion into corners of Cover and zip shut.

9 Configure Cush

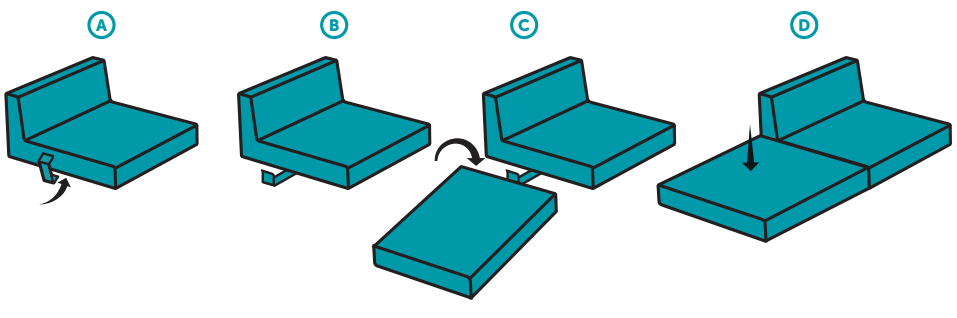

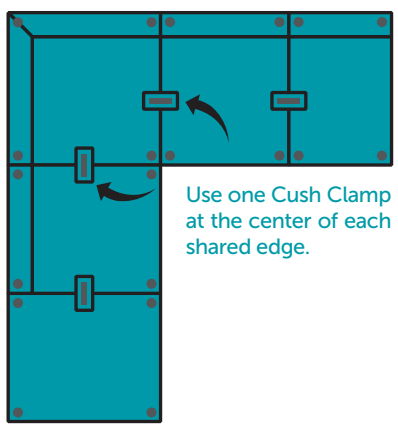


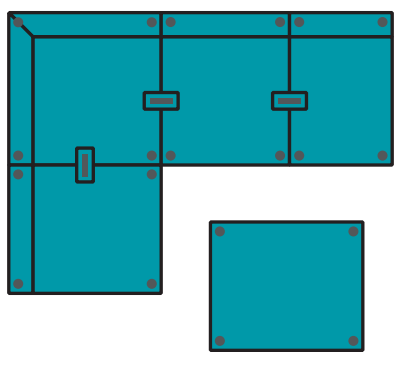

Cush Sticky Feet and Cush Clamps work together to keep connected Seats and Ottomans from moving apart.

(A) Center Cush Clamp along the edge where two pieces will connect. Hold it upright on its narrow edge and slide one end underneath the first Seat or Ottoman.
(B) Rotate Cush Clamp flat with the felt side facing down, leaving half of the Cush Clamp exposed.
(C) Lift the next Seat or Ottoman being added, position over the exposed half of the Cush Clamp, and slowly lower into place.
(D) Press down firmly on the added piece to secure the connection.

10 Add Seat Cushions and Back Pillows

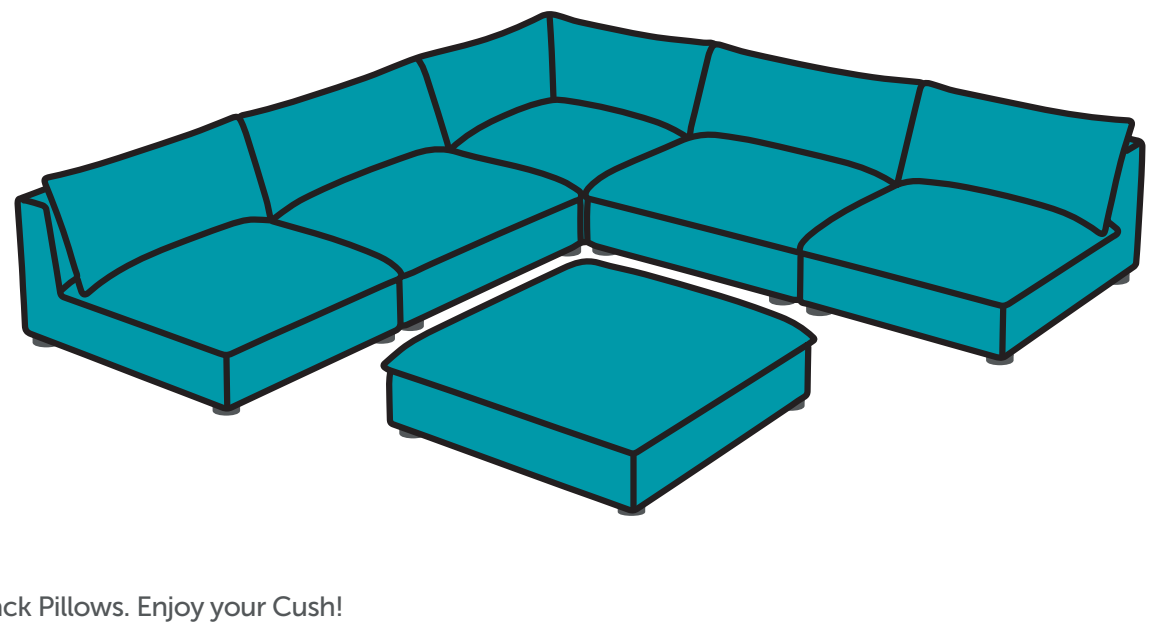

Add Seat Cushions first, then Back Pillows. Enjoy your Cush!