

LOVESAC[®]

Designed for Life Furniture Co.



SACTIONALS[®] RECLINING SEAT

SETUP GUIDE

Important Safety Instructions

WHEN USING A SACTIONALS RECLINING SEAT, THE FOLLOWING SAFETY PRECAUTIONS MUST ALWAYS BE FOLLOWED:

Read all instructions before using this product.

DANGER – To reduce the risk of electric shock or serious injury:

- Disconnect the electrical plug from the wall outlet before cleaning, moving, servicing or when not in use for an extended period of time.
- Do not use this product if it is wet, in water, around water, or any liquid.

WARNING – To reduce the risk of electrical shock, entrapment, or serious injury:

- Improper use and assembly of the Sactionals Reclining Seat can lead to serious injury.
- Keep remote out of reach of children.
- The Sactionals Reclining Seat should not be used or operated by children.
- To reduce the risk of entrapment or other injuries, keep children and pets away from openings and moving parts.
- Keep hands, fingers, arms, legs, and feet away from moving parts during operation of the Reclining Seat Mechanism. Major pinch points are labeled on the Reclining Mechanism, but users should be aware of all moving parts.
- Do not sit or jump on the Footrest.
- The Sactionals Reclining Seat is designed for seating only by 1 adult user, max weight of 300 lbs at a time.
- Always leave the Reclining Seat in an upright and closed position when not in use.
- Always keep open flame and lit cigarettes away from upholstered furniture and Reclining Seat Mechanism.
- Sit down in the unit slowly. Make sure that no children or pets are in close proximity when moving the unit into or out of the reclining position.
- This product has many moving parts, serious injury can occur if not used or assembled properly. Keep children and pets away from the Reclining Seat Mechanism. Keep hands, fingers, and body parts away from the Reclining Mechanism.
- Only the occupant should operate the unit. Never attempt to open the Footrest by pulling on it.
- Do not stand, sit or place extra weight on the arms, back or open Footrest.
- To safely exit the unit and prevent a tripping hazard bring the backrest upright and ensure the Footrest is completely retracted.
- Do not use this product if it is damaged. Do not use attachments or substitute parts.
- This product is intended for indoor residential use only by adults.
- Provide a clear path for operation of the Seat Cushion, Backrest, and Footrest. Place tables and area rugs at a distance to allow the Footrest to fully extend without rubbing or interference.

Important Safety Instructions

- Check the condition of the Reclining Seat Mechanism and Power Cord regularly. Keep the Power Cord and other electrical cords away from heat sources. Never operate the unit with a damaged Reclining Seat Mechanism or Power Cord.
- Do not use unit if Power Cord is damaged or wet. Do not use Remote if it has been dropped in water or any liquid.
- This product is not intended for use as a health care device.
- Users of medical devices should contact their health care provider before using this product. Do not use this product if you have poor circulation, are immobile, or cannot sense heat, except as directed by your health care provider.
- Do not use this product where aerosol (spray) products are being used or where oxygen is being administered. Do not operate the unit until the Backrest is installed and locked.
- Use care when moving the product. Before lifting the product, secure the Reclining Seat Mechanism to prevent unexpected opening or movement. Never move the product by the Seat Frame Lid, Footrest, or Backrest. Disconnect other Sactionals pieces before moving. Securely grip non-moving parts only.
- Do not attempt to disassemble or service the Reclining Seat Mechanism motor assembly. No serviceable parts are inside the motor assembly.
- This unit is made to be modular to fit with multiple Sactionals configurations. Because of this, parts must be assembled and should only be used after following the setup instructions in this guide. Do not operate the Reclining Seat Mechanism when it is not installed in the Reclining Seat Frame
- Keep hands, arms and body parts away from the open area between a reclined Backrest and the back of your Sactionals. This area must remain clear at all times to provide unobstructed movement and prevent injury that could occur when a reclined Backrest is returning toward the upright position.
- Reclining Seat must be used only when connected to a Sactionals Side as a back and cannot be left open on either sides (must be connected to a Sactionals Side, Seat, or AnyTable on both sides).
- Keep Remote at room temperature when possible. Do not charge at temperatures below 32°F (0°C) or above 105°F (40°C). Do not keep charging the remote after it is fully charged.
- Store remote away from anything that can catch fire
- Stop using the remote if you notice these problems: odor, change in color, too much heat, change in shape, leaking, or odd noises. If it is safe to do so, move the device away from anything that can catch fire. Call 911.
- Remote contains lithium batteries and should not be placed in the trash. Recycling is always the best option. Take to an electronics recycling location or local disposal center.
- Please keep this Setup Guide with the product during its full lifetime use.

Table Of Contents

INTRODUCTION	5
WHAT'S INCLUDED.....	6
PLANNING YOUR LAYOUT.....	8
SETUP	9
RECONFIGURE	18
CONTROLS.....	26
TROUBLESHOOTING.....	27

Introduction

Overview

Lovesac products are designed to provide comfort, convenience, and peace of mind, no matter where life takes you. The Sactionals Reclining Seat lives up to all of that and more so you can live the life you love in Total Comfort. We strongly encourage you to read through this guide that describes the Reclining Seat product and includes step-by-step instructions to help you set up your Sactionals.


Read and understand all the safety instructions before using this product. If you have any questions about these products, their installation, or their operation, please contact the Lovesac Customer Love Team at 1-888-636-1223 or support@lovesac.com. You can also visit www.lovesac.com for additional resources.

Scan for setup videos & additional troubleshooting resources:




What's Included


Sactionals Reclining Seat Mechanism Box

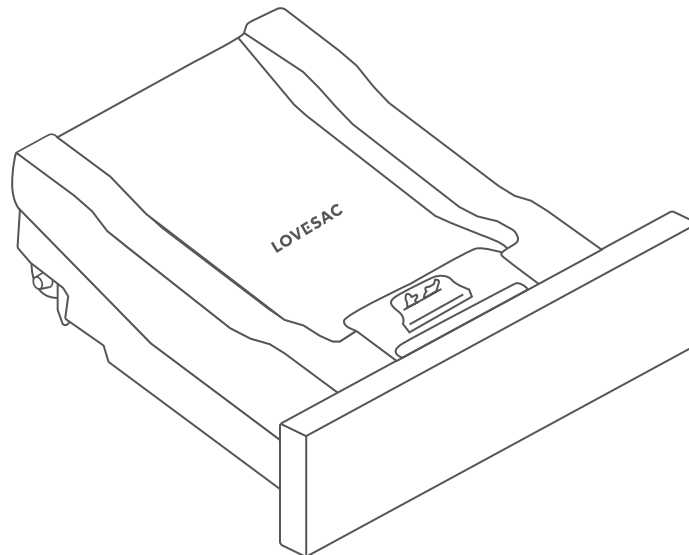


Reclining Seat Mechanism

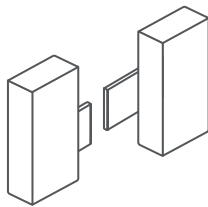


Footrest Extensions
For Standard Depth Seating

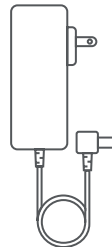


Power Cord

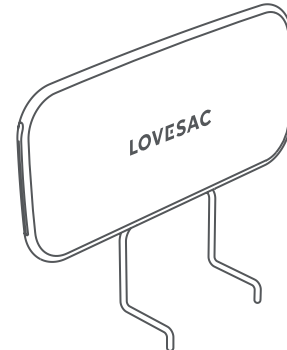

Backrest

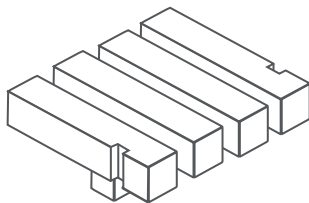

Frame Support Bars

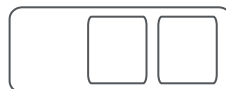


Remote




Caution: Reclining Seat Mechanism is HEAVY. Use handle and wheel to move.

Please ensure all parts have arrived and appear in good condition. If you believe you are missing parts or something appears damaged, please reach out to our Customer Love team: support@lovesac.com.


Sactionals Reclining Seat Insert Box

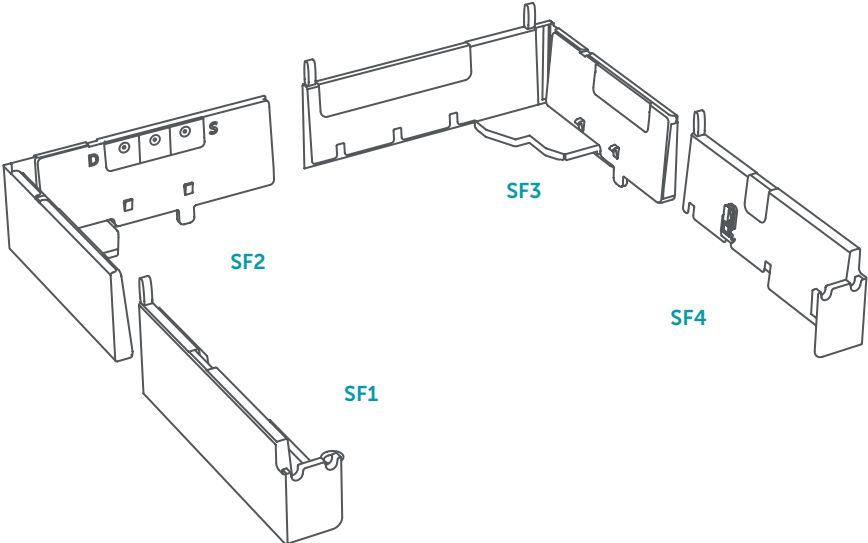

Reclining Seat Frame

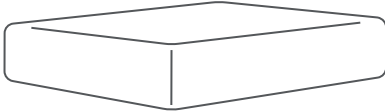


Reclining Seat Cushion

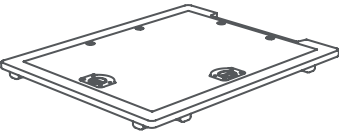

Seat Frame Lid



Back Pillow

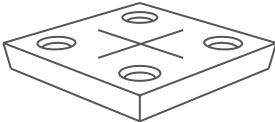


Shoe



Reclining Seat Clamp



Thumb Screw

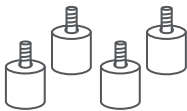

4x Feet



9x Felt Pads

Planning Your Layout

Configuration Guidelines

Reclining Seat must be affixed to a Sactionals Seat, Side, or AnyTable on both right and left sides. A Sactionals Side must be used behind Reclining Seat. Do not clamp two Reclining Seats together.

Plan for at least 30 inches (77 cm) of clear space in front of your Reclining Seat to fully extend the footrest without obstruction.

Using Reclining Seat in a corner of a Sactionals configuration or on both sides of a Wedge Seat may obstruct adjacent Seats.

Reclining Seat should not be connected to a chaise or ottoman as Footrest functionality would be limited.


A StealthTech Sound + Charge Subwoofer cannot be installed inside of a Reclining Seat Frame. Reference StealthTech Sound + Charge Setup Guide prior to installing your Reclining Seat.

Not following these guidelines may increase risk of serious injury.

Plan Seat Depth

Reclining Seat can configure to either Standard or Deep Seat depths.


Your Reclining Seat Frame shipped preconfigured Standard or Deep based on Seat type purchased. To reconfigure to the other Seat depth, do that now by referring to the "Reconfigure" section on page 18.

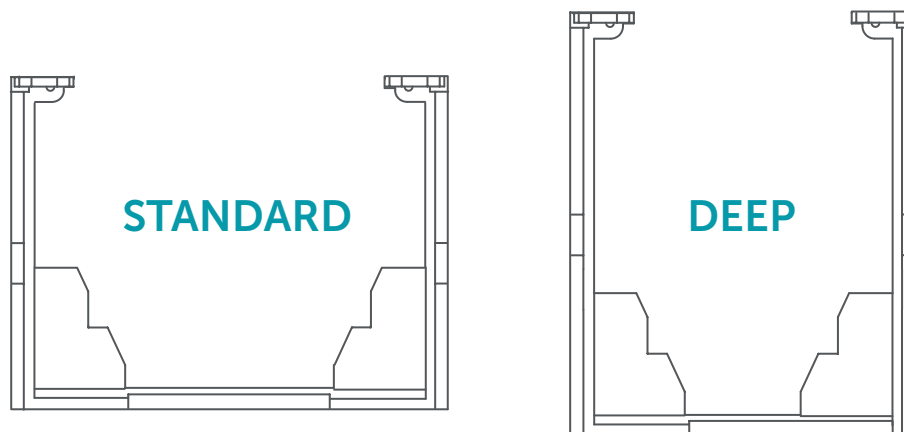


STEP 1 Unbox All Parts

1.1 Unbox Components

- a. Carefully unbox Sectionals Inserts, Covers, and all Reclining Seat parts.
- b. Remove Cushions, Back Pillows, and hardware from Inserts.
- c. If you have multiple Lovesac products, reference all instructions before installation.

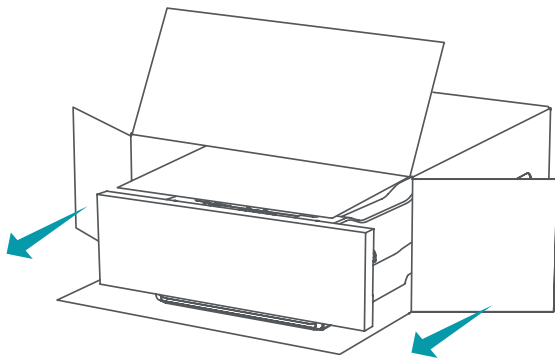

Reclining Seat Mechanism Box

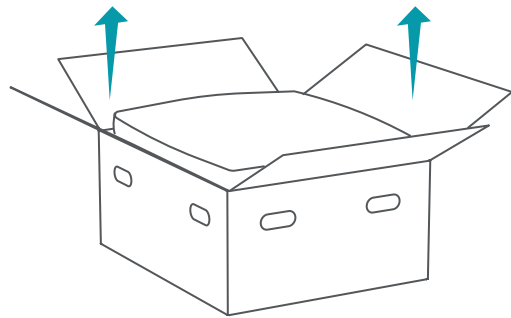


Reclining Seat Insert Box



Caution: Reclining Seat Mechanism weighs 80 lbs. Use minimum of two people to remove from packaging.

1.2 Save or Recycle Cardboard Boxes

- a. Flatten cardboard boxes for future use or please recycle them.

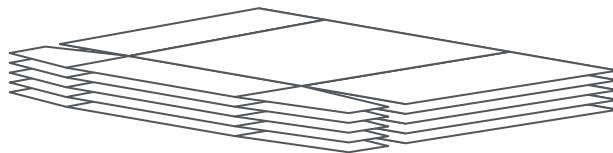


Setup

STEP 2 Cover All Inserts

2.1 Cover Reclining Seat Inserts

- a.** Cover Sactionals Reclining Seat Cushion Insert and Sactionals Back Pillow Insert. Your Reclining Seat Cushion Insert and Cover are labeled for easy identification.

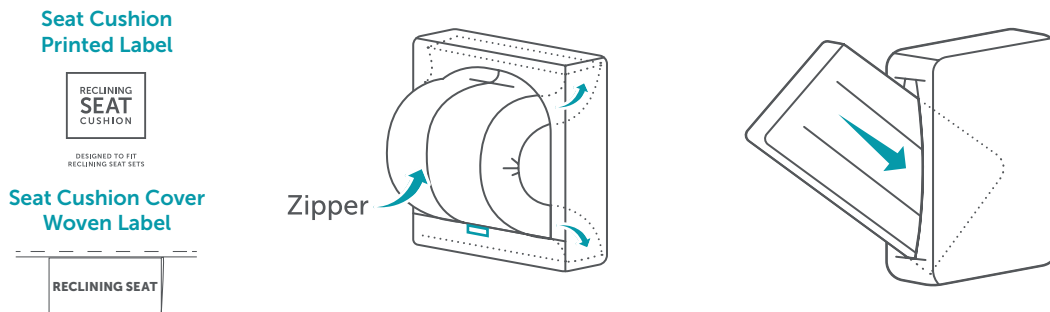

**Note: Leave Reclining Seat Footrest uncovered at this stage. Reclining Seat Cushion and Covers are sized differently than other Sactionals Inserts.*


2.2 Cover Remaining Sactionals Inserts

- a.** Cover all other Sactionals Inserts. More detailed instructions are available on Sactionals Insert box flaps.

STEP 3 Install Feet and Prep Layout

3.1 Install Feet and Felt Pads

- a.** Tilt up Reclining Seat Frame and screw in four Feet.
b. If you have hard floors, add felt pads to bottom of Shoes and Reclining Seat Frame Posts as shown below in red.

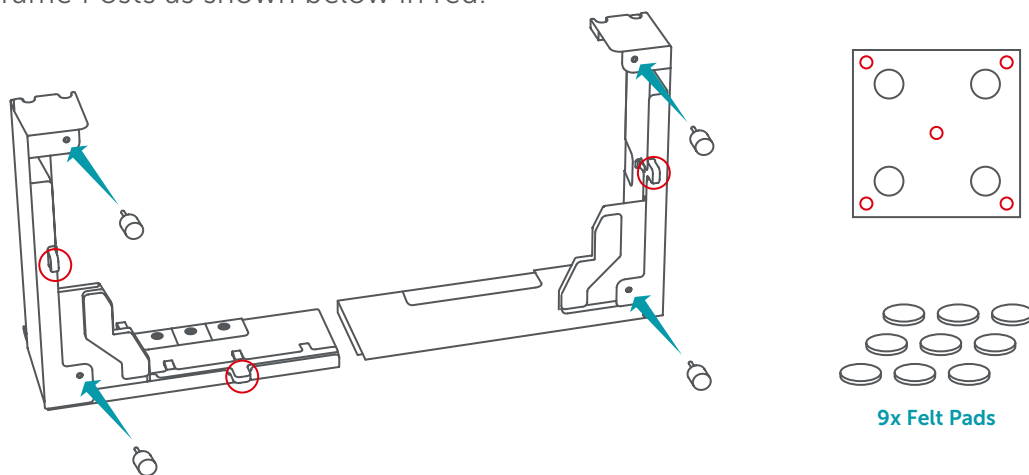


**Note: Feet do NOT need felt pads. Feet are lifted off floor by Shoes.*

Setup

3.2 Lay Down Shoes and Power Cord

- Place Shoes for your Sactionals configuration.
- Lay Reclining Seat Power Cord into place between Shoes.
- Plug Power Cord into wall.

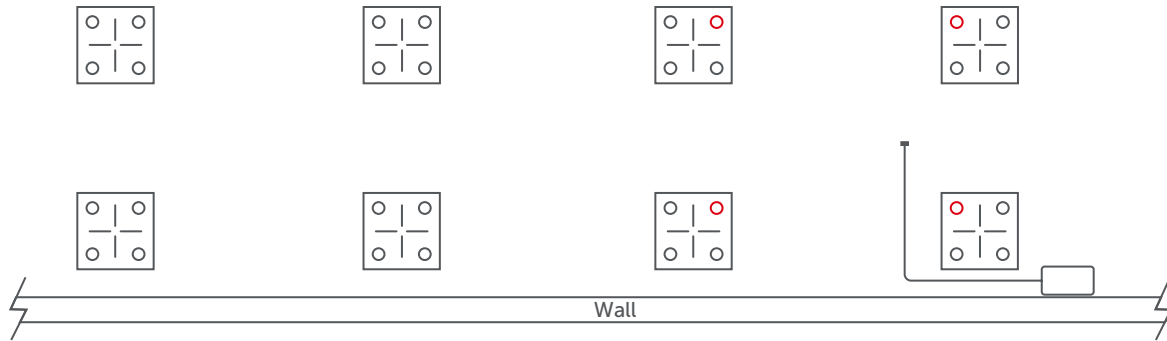


3.3 Place Sactionals Seats and Sides

- Place all Sactionals Seat Frames into Shoes, excluding Reclining Seat Frame.
- Place all Sactionals Sides into Shoes, excluding the Side that will be connected to the back of Reclining Seat.

STEP 4 Place Reclining Seat Frame

4.1 Place Reclining Seat Frame

- Insert your Reclining Seat Frame into four Shoes; place right half (SF1 + SF2) first, then the other half (SF3 + SF4). Align Seat Frame Cutout over "S" or "D", configuring Reclining Seat to Standard or Deep seat depth, respectively. Reference page 7 for Reclining Seat Frame parts diagram.
- Straighten Shoes using alignment marks.
- Place Sactionals Side into Shoes behind Reclining Seat Frame.

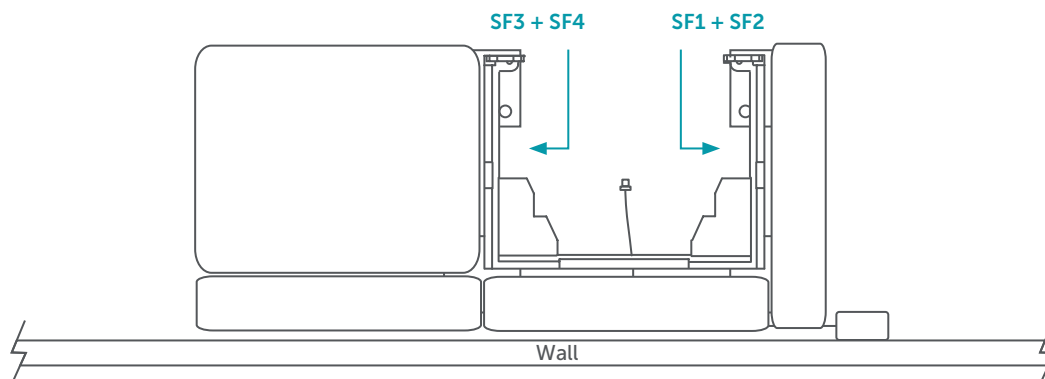


Caution: Ensure cables are routed so they are not pinched by Shoes.

Setup

4.2 Secure Reclining Seat with Clamp


- a. Add Reclining Seat Clamp.
- b. Insert Thumb Screw through Reclining Seat Clamp and Seat Frame.
- c. Add Clamps for any adjacent Sides. Do not clamp two Reclining Seats together.

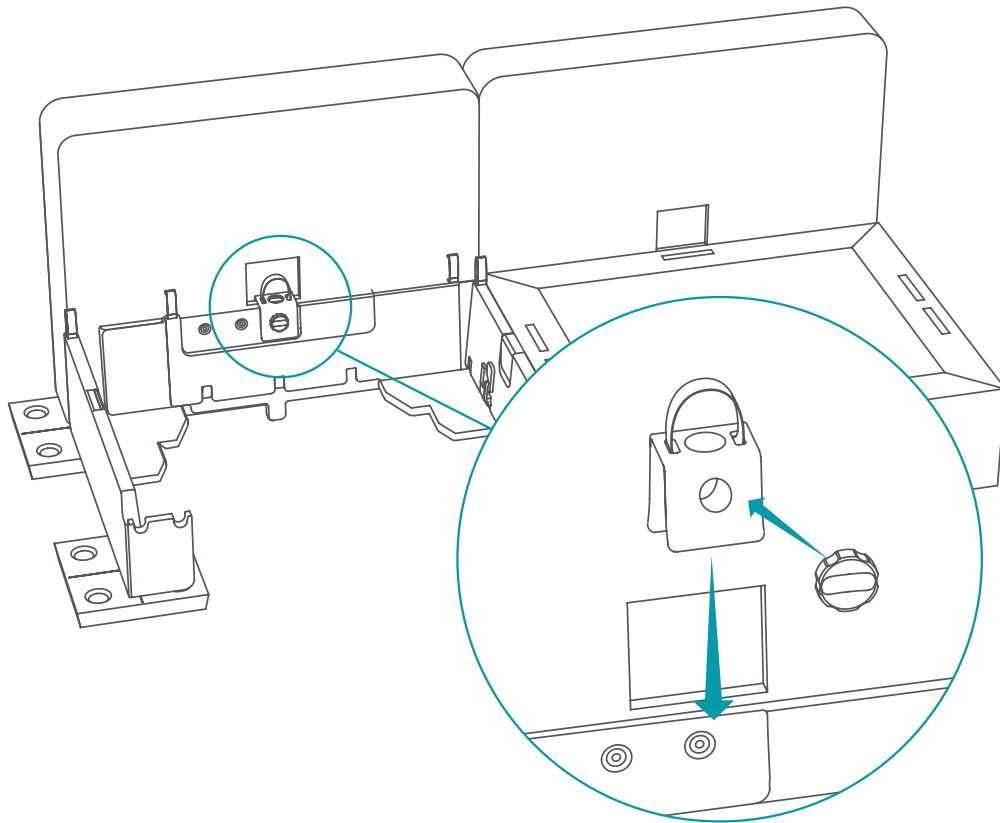

STEP 5 Install Reclining Seat Mechanism

5.1 Connect Power Cord

- a. Using teal handle, partially wheel Reclining Seat Mechanism into Seat Frame.
- b. Connect Power Cord to back of Reclining Seat Mechanism.

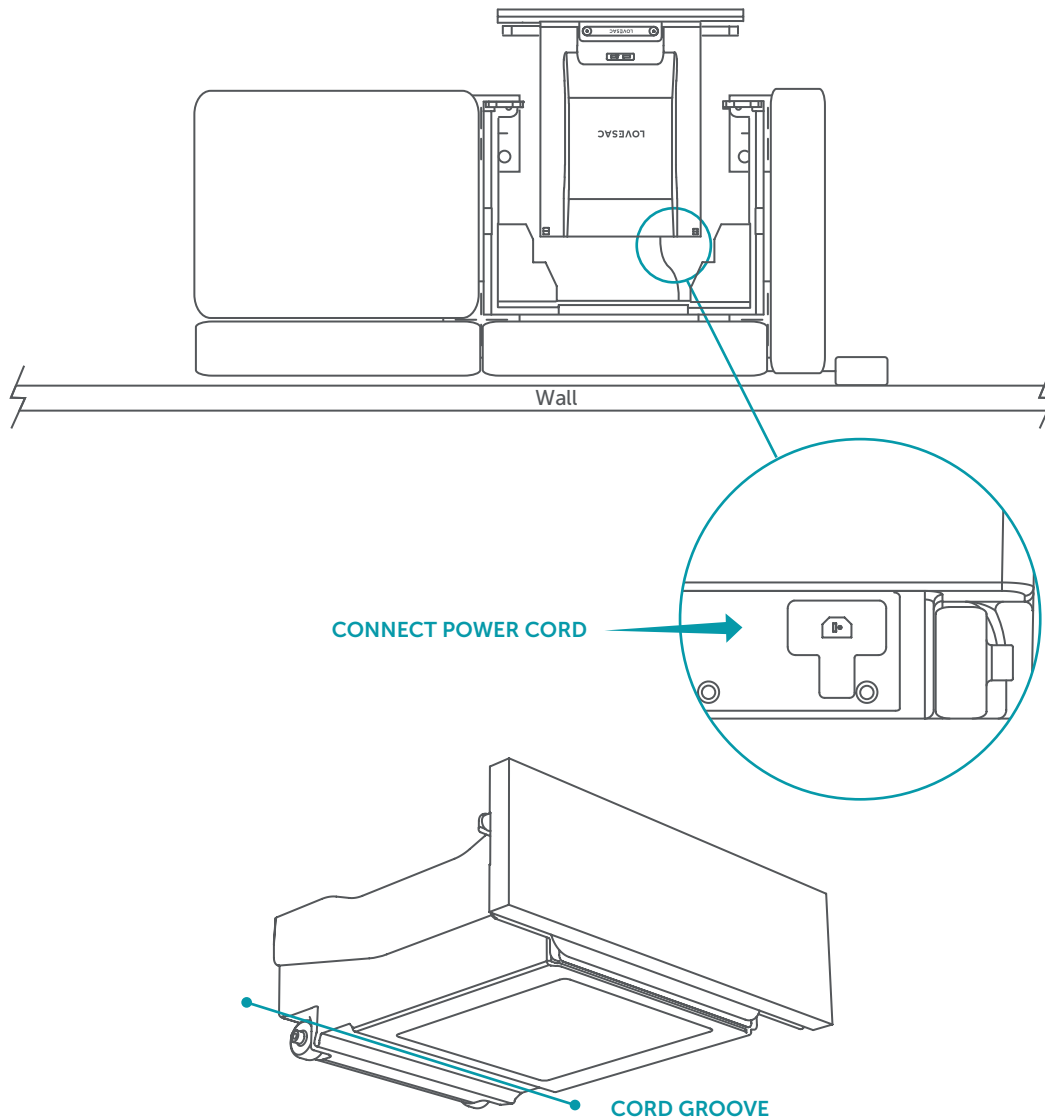

***Note: If you have Lovesac StealthTech products, ensure all cables and cords are placed through the groove underneath the Reclining Seat Mechanism so they do not get pinched.**




Caution: Reclining Seat Mechanism is HEAVY. Use handle and wheel to move.

Setup

5.2 Dock Reclining Seat Mechanism

- Using teal handle, lift front of Reclining Seat Mechanism into groove at front of Reclining Seat Frame.
- Ensure all cables and cords are not pinched under Reclining Seat Mechanism.

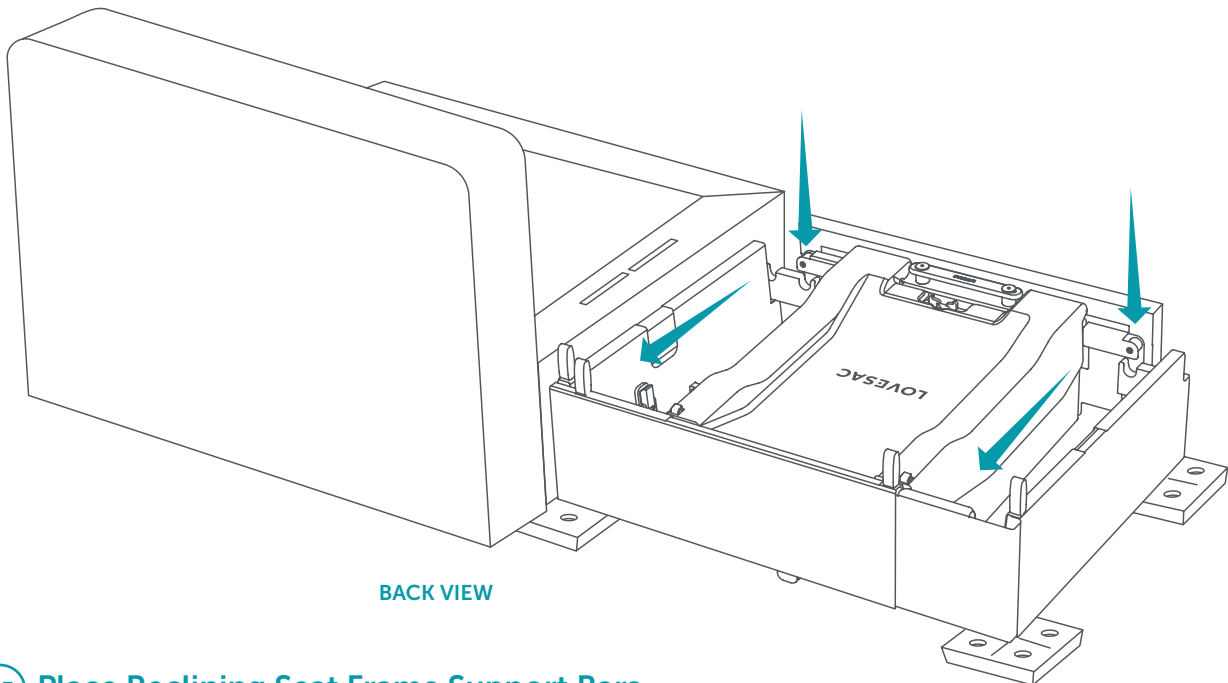


BACK VIEW


5.3 Place Reclining Seat Frame Support Bars

- Place Reclining Seat Support Bars in Frame as shown in the visuals below.
- If your Reclining Seat is configured Deep, you will not need the two Footrest Extensions that are required for Standard Seating. Store them vertically between the Reclining Seat Frame and the Support Bars for future use, in the location shown below.

STANDARD

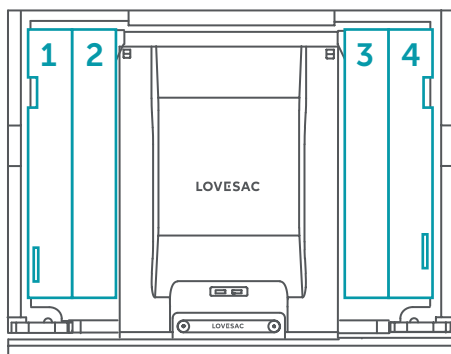

DEEP

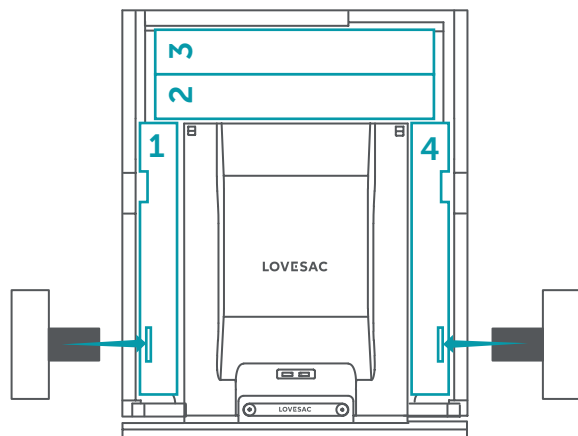


Warning: Broken Support Bars may create choking hazards. Discard and request new Support Bars if they become damaged or broken.

STEP 6 Install Seat Frame Lid

6.1 Install Seat Frame Lid

- a. Slide Seat Frame Lid onto metal hooks on Reclining Seat Mechanism.
- b. Press front of Seat Frame Lid down to lock in place.
- c. Pull up on Seat Frame Lid to ensure it is fully secured.

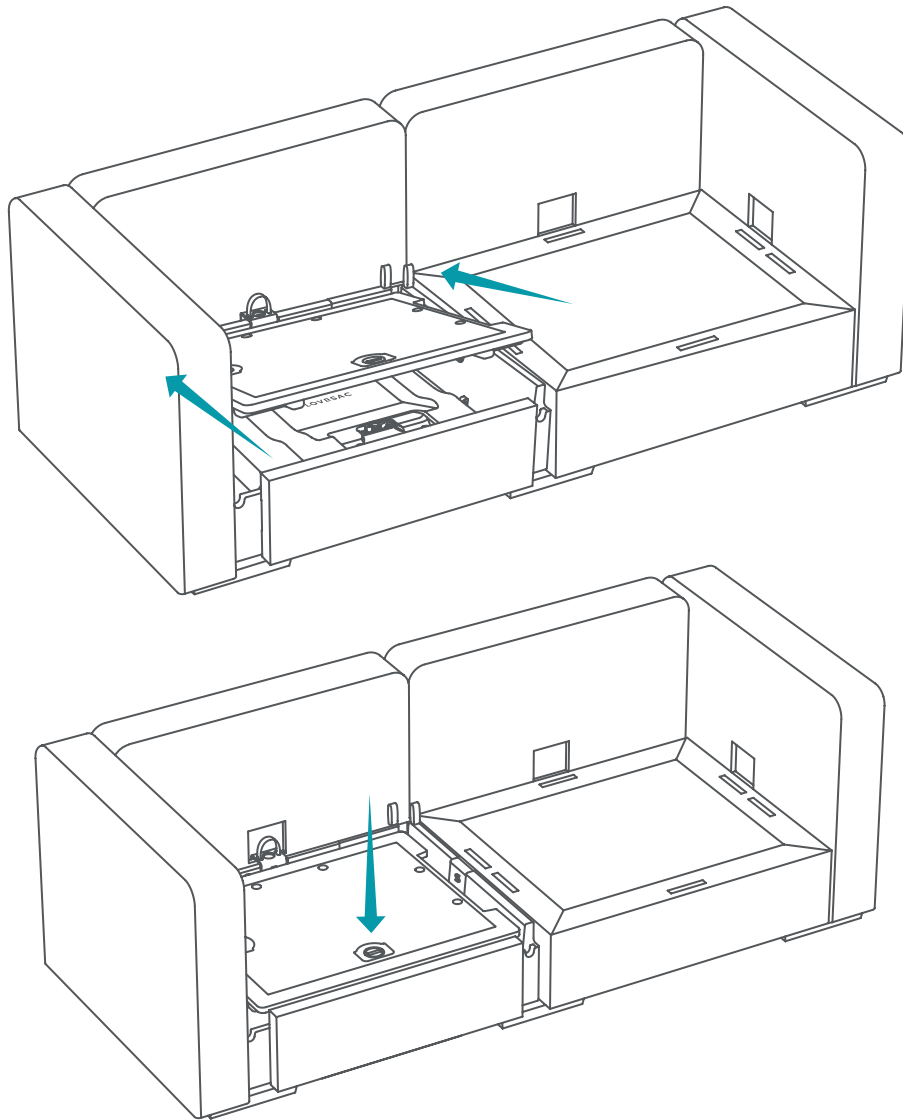


**Note: Ensure Seat Frame Lid is oriented correctly to fit the Seat depth of your Reclining Seat. Front lock only needs to be used to REMOVE Seat Frame Lid, not to install. Seat Frame Lid should not come off the Reclining Seat Mechanism at this stage unless lock is twisted.*

STEP 7 Install Reclining Seat Backrest

7.1 Install Backrest


- a. With the Backrest facing forwards, slide Backrest into holes on back of Seat Frame Lid.

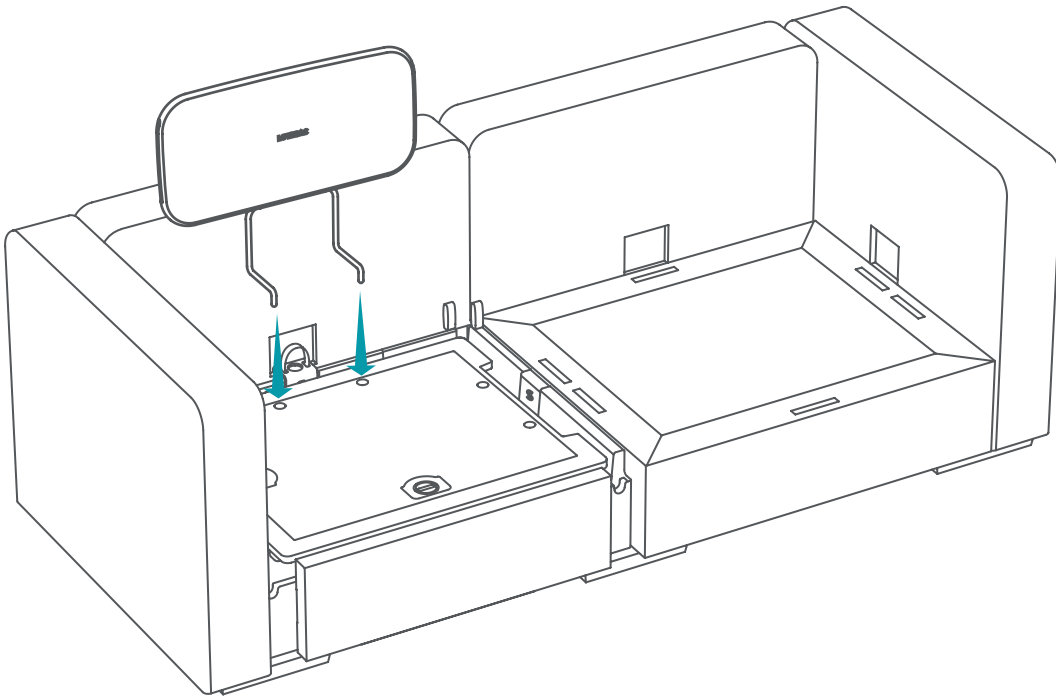

STEP 8 Place Seat Cushions & Back Pillows

8.1 Place Seat Cushions and Back Pillows

- a. Place Reclining Seat Cushion on top of Seat Frame Lid.
- b. Add Back Pillow to Reclining Seat.
- c. Add remaining Sectionals Seat Cushions and Back Pillows.

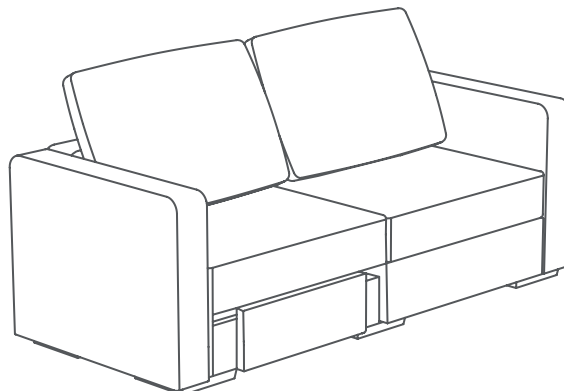


Setup

STEP 9 Install Footrest Extensions

**Note: If your Reclining Seat is configured Deep, skip this step.*

9.1 Install Footrest Extensions


- Using Remote, extend Footrest (For Remote instruction, reference page 26).
- Slide Footrest Extensions into slots located on back of Footrest.

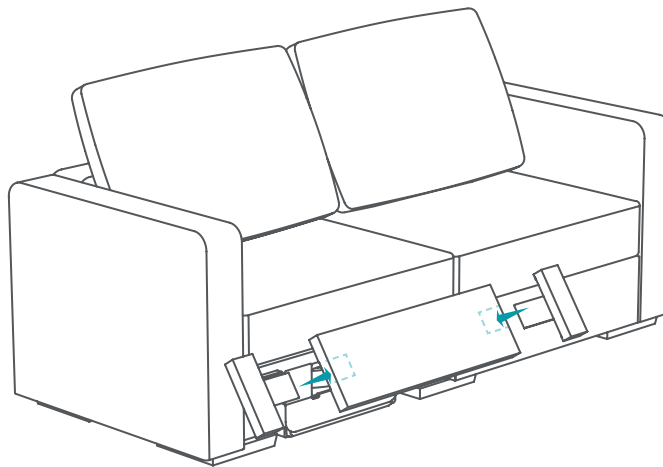

STEP 10 Cover Footrest

10.1 Cover Footrest

- If Step 9 was skipped, extend Footrest using Remote (For Remote instruction, reference page 26).
- Locate Footrest Cover (Labeled Standard or Deep as shown below)
- Wrap Footrest Cover around and apply Velcro neatly and evenly, aligning seams.
- Retract Footrest. Store extra Footrest Cover for future use.

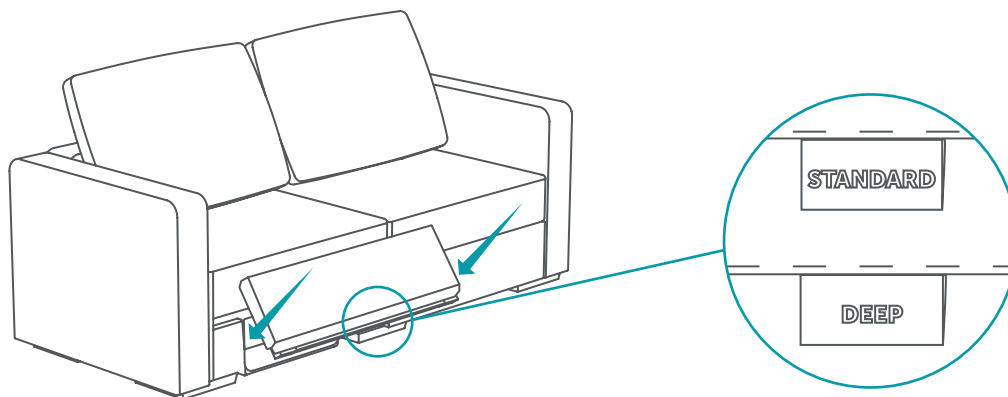

**Note: Reclining Seat comes with two Footrest Covers to support Standard and Deep configurations.*

YOUR SACTIONALS RECLINING SEAT SETUP IS COMPLETE!

Reconfigure

Reclining Seat Frame Reconfiguration


Reclining Seat can be set in either Standard or Deep Seat depths. Use this section to adjust your Reclining Seat Frame to your preferred Seat depth.

If you are reconfiguring the Reclining Seat Frame before your Sactionals are set up, jump ahead to Step 4.2 on page 21.

STEP 1 Reconfigure Footrest

1.1 Reconfigure Footrest

- a. Using Remote, fully extend Footrest.
- b. Remove Footrest Cover.
- c. Add or remove Footrest Extensions
 - If configuring Reclining Seat to Standard Seat depth, Footrest Extensions will be retrieved and installed later.
 - If configuring Reclining Seat to Deep Seat depth, slide out both Footrest Extensions from slots on back of Footrest.
- d. Retract Footrest

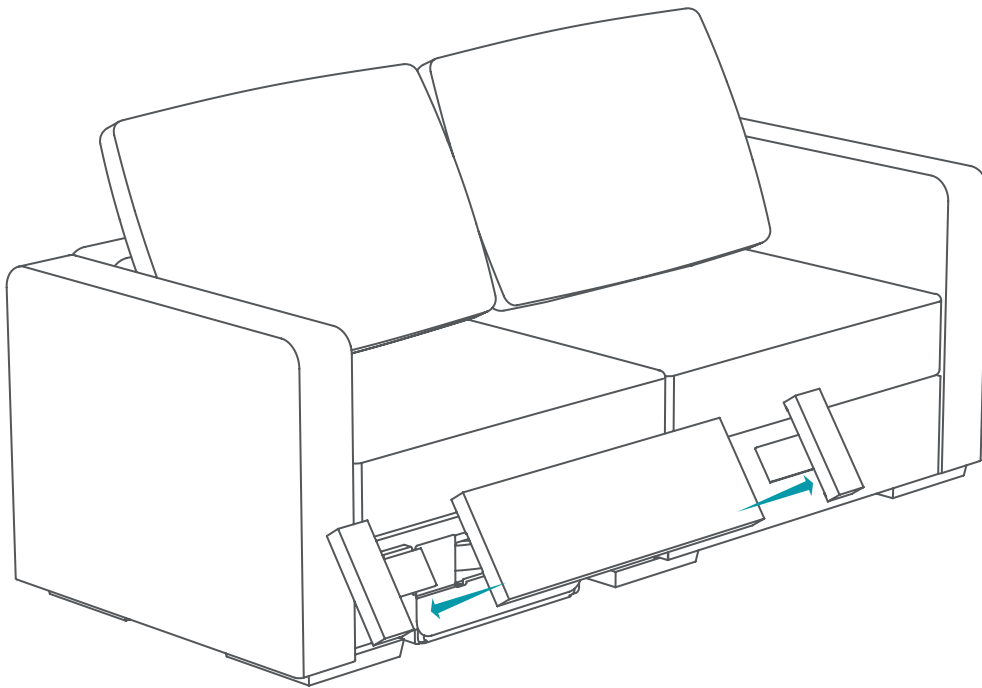


Reconfigure

STEP 2 Remove Cushions, Backrest & Seat Frame Lid

2.1 Disassemble Items

- a. Unplug Reclining Seat from power source for safe disassembly.
- b. Remove Back Pillow, Reclining Seat Cushion, and Backrest.
- c. Turn lock at front of Seat Frame Lid and pull up to remove.
- d. Remove Reclining Seat Frame Support Bars.
- e. If configuring from Deep to Standard, remove Footrest Extensions from storage location and set aside.


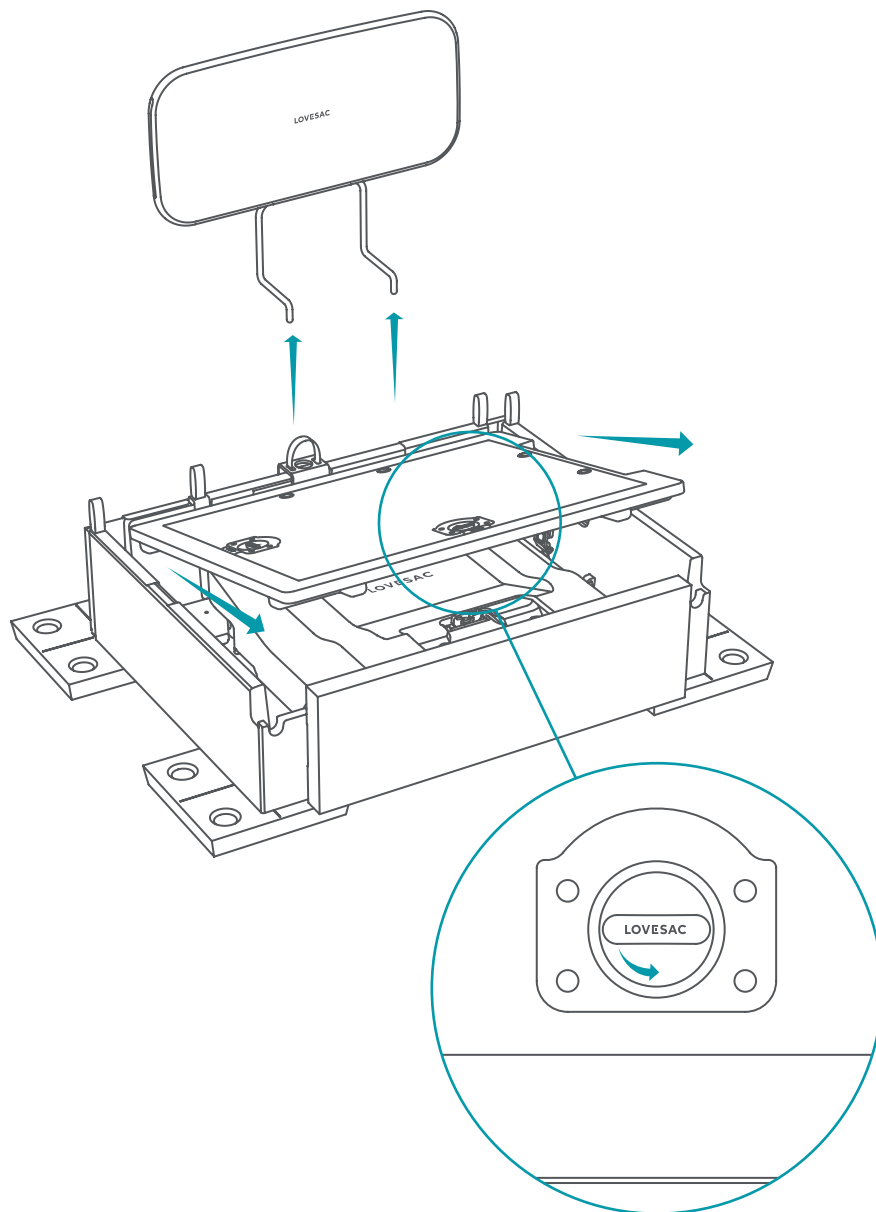



Reconfigure

STEP 3 Remove Reclining Seat Mechanism

3.1 Remove Reclining Seat Mechanism

- a. Using teal handle, lift front of Reclining Seat Mechanism to undock from Reclining Seat Frame
- b. Disconnect Power Cord from back of Reclining Seat Mechanism and wheel aside.

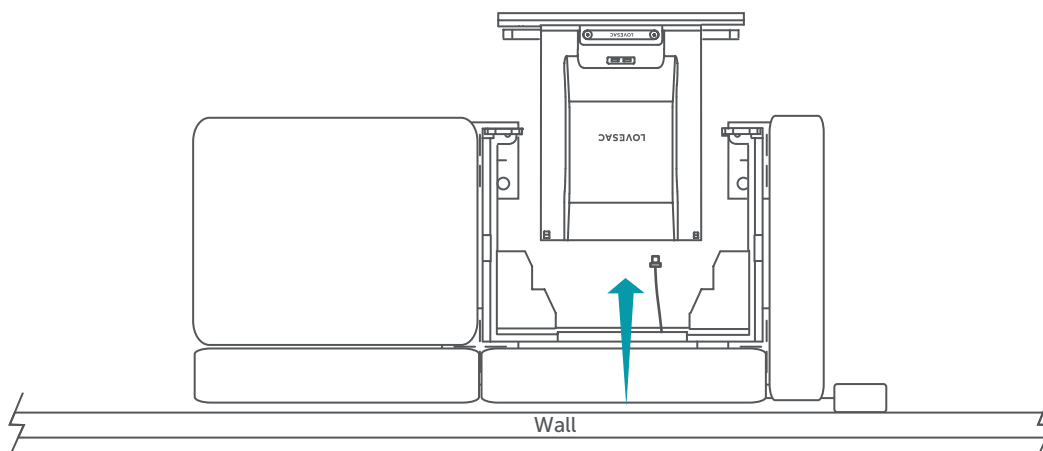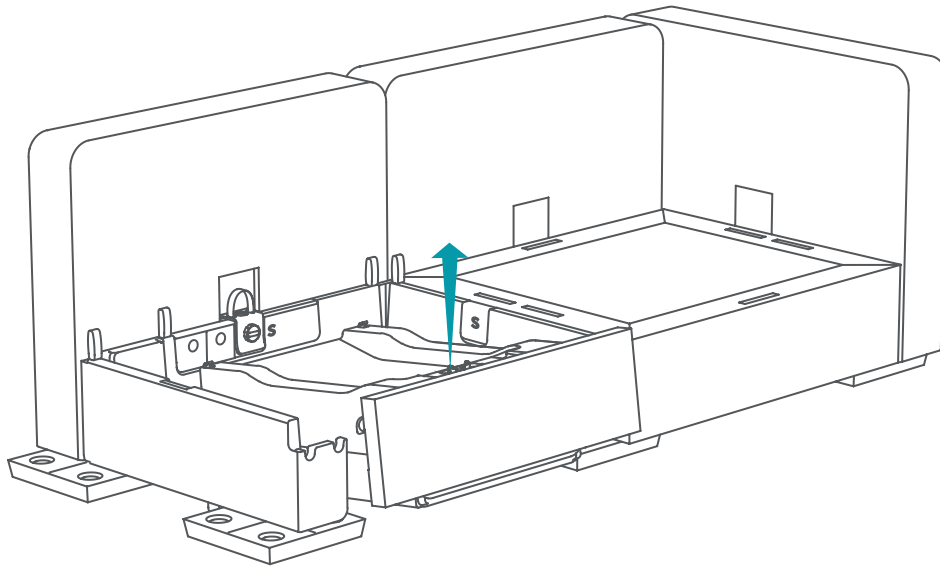


 **Caution: Reclining Seat Mechanism is HEAVY. Use handle and wheel to move.**

Reconfigure

STEP 4 Disassemble Reclining Seat Frame


4.1 Remove Reclining Seat Clamp

- a. Remove Thumb Screw, then Reclining Seat Clamp.
- b. Remove back Side.

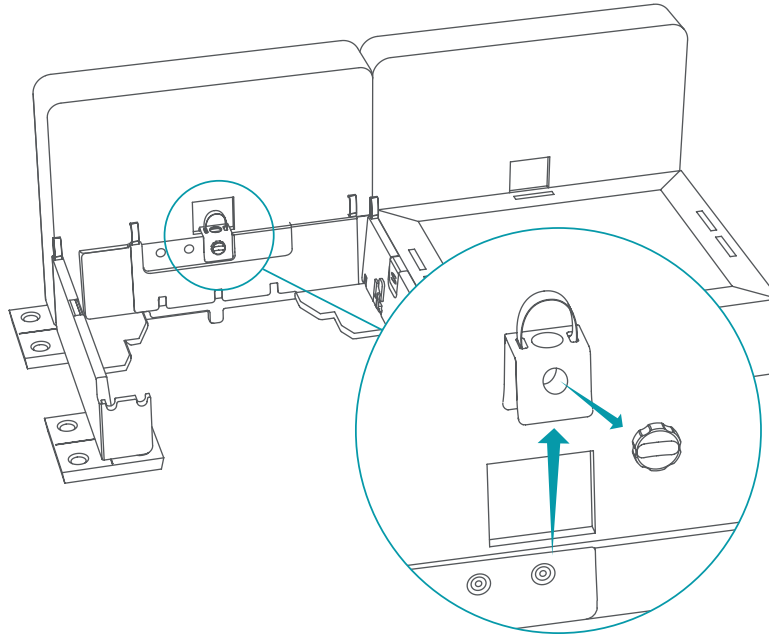

4.2 Remove Seat Frame 4 (SF4)


- a. Unhook latch on SF4.
- b. Using loop, pull straight up on SF4 to not damage Feet or Reclining Seat Frame. Lift and set aside.

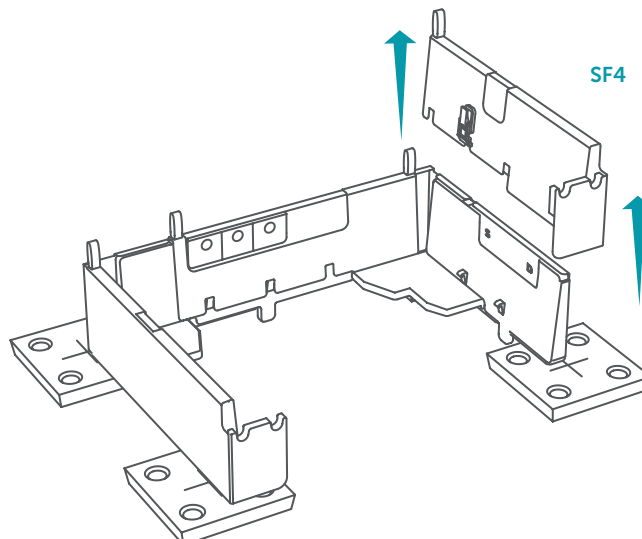

Reconfigure


4.3 Remove Seat Frame 3 (SF3)

- a.** Using loop, pull straight up on SF3 to not damage Feet or Reclining Seat Frame. Lift and set aside.

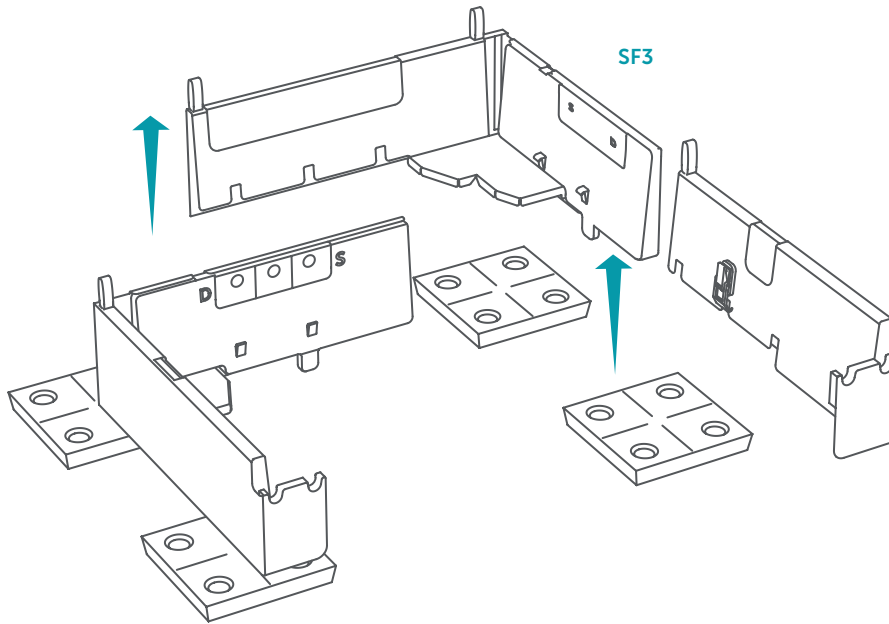

4.4 Remove Seat Frame 1 (SF1)


- a.** Unhook latch on SF1.
- b.** Using loop, pull straight up on SF1 to not damage Feet or Reclining Seat Frame. Lift and set aside.

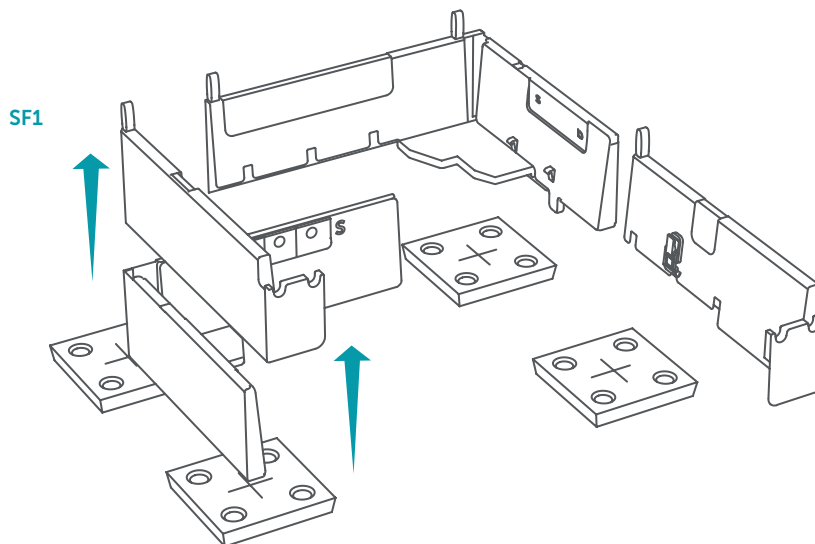

Reconfigure

4.5 Removing Seat Frame 2 (SF2)


- Lift SF2 and set aside. Pull straight up to not damage Feet or Seat Frame.
- Adjust Shoes, Seats, and Sides for new Sactionals configuration.

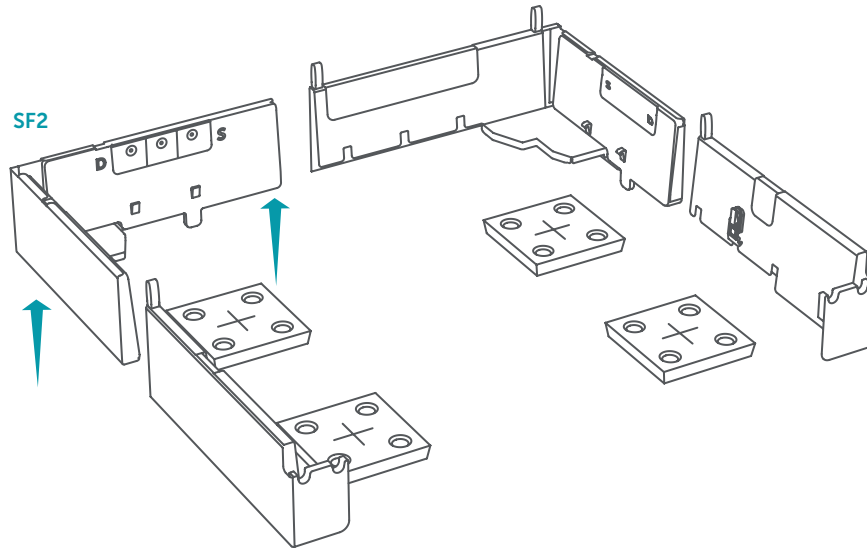

STEP 5 Configure Reclining Seat Frame

5.1 Assemble SF1 and SF2


- Adjust all Sactionals Shoes, Seats, and Sides for new Sactionals configuration.
- Slide SF1 over SF2, aligning Seat Frame Cutout over "S" or "D", configuring Reclining Seat to Standard or Deep seat depth, respectively.
- Latch and secure SF1 to SF2.

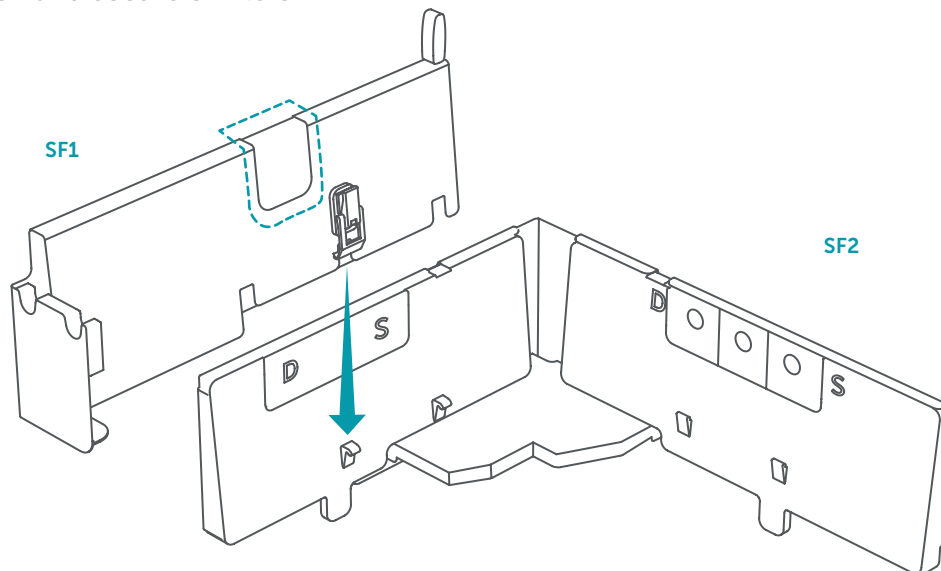

Reconfigure

5.2 Assemble SF3 and SF4


- a. Slide SF4 over SF3, aligning Seat Frame Cutout over "S" or "D", configuring Reclining Seat to Standard or Deep seat depth, respectively.
- b. Latch and secure SF4 to SF3.

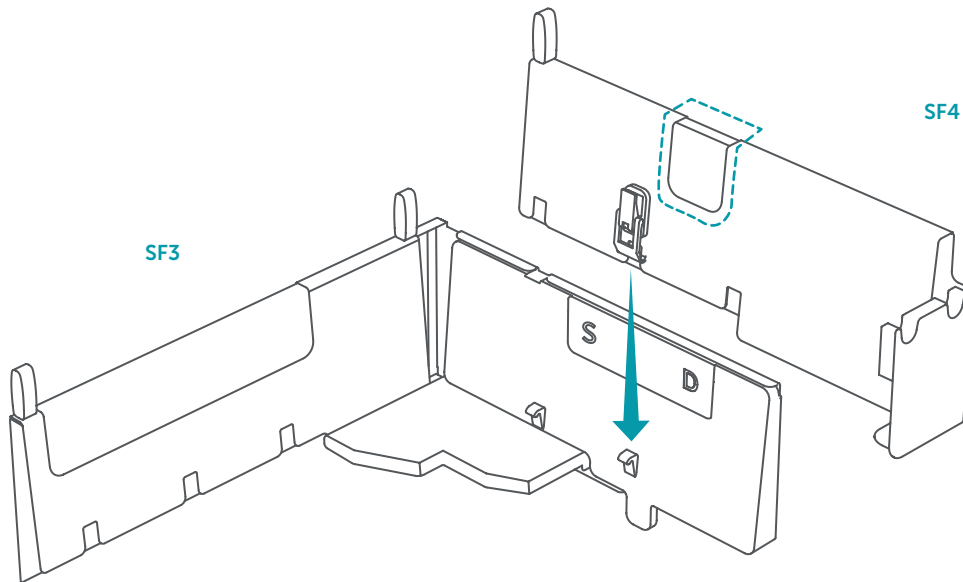

STEP 6 Install Seat Frame

6.1 Place assembled Seat Frame 1 and 2 (SF1+SF2)


- a. Assemble Sectionals Seats & Sides leaving a location for Reclining Seat.
- b. Carefully lift SF1+SF2 sections and place into Shoes.

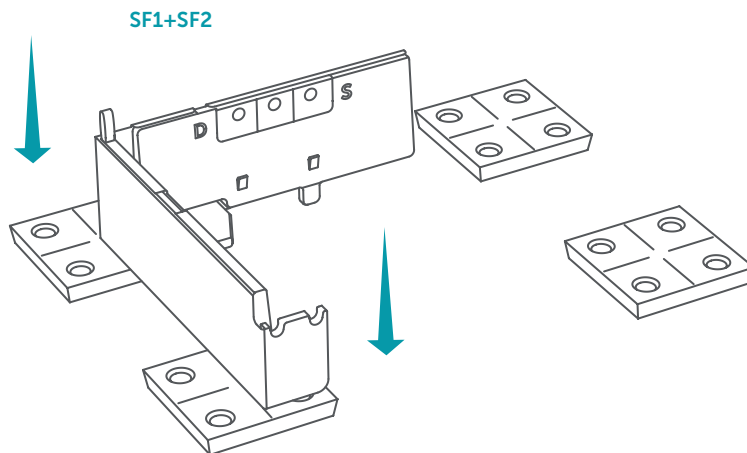

Reconfigure

6.2 Place assembled SF3 and SF4 (SF3+SF4)

- a. Slide SF3+SF4 over SF1+SF2, aligning Seat Frame Cutout over "S" or "D", configuring Reclining Seat to Standard or Deep seat depth, respectively.
- b. Carefully place into Shoes.

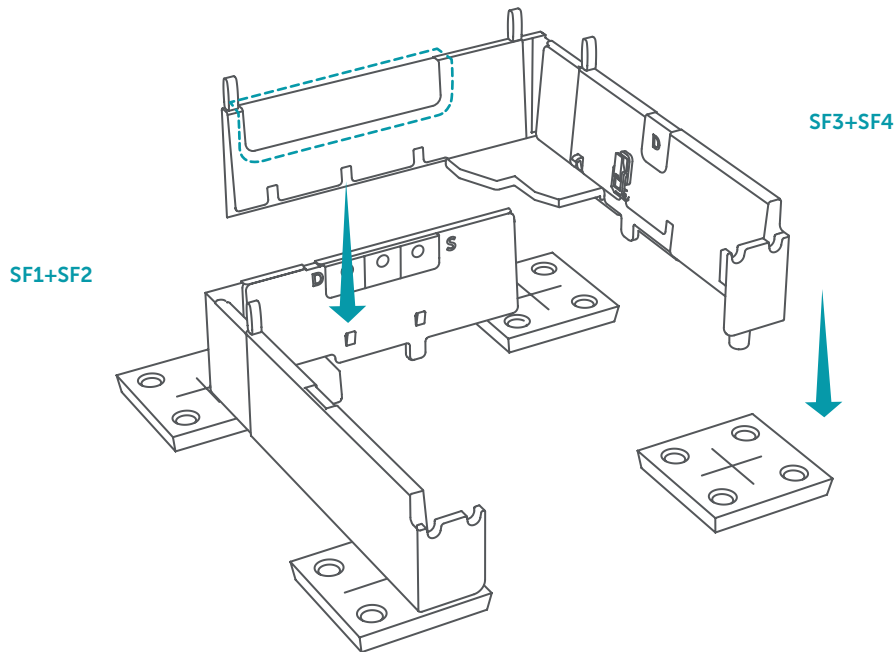

STEP 7 Complete Reclining Seat Setup

7.1 Setup Reclining Seat

- a. With Reclining Seat Frame now placed in new orientation, complete setup by following instructions starting at 4.1.C on page 11.

Controls

Reclining Seat Remote

The Sactionals Reclining Seat is controlled by two buttons located on the Remote. Push and hold the buttons to recline to your desired position.

The LED light bar will appear red while in use when your Remote needs to be charged. Use the USB-C port located on the side of the Remote to charge. Charge your Remote when you first receive your Reclining Seat, then every few months. Light bar will flash teal when charging and remain lit when fully charged until unplugged. Charging cord not included.

Your Remote should already be paired with your Reclining Seat. When pairing a new remote or to re-pair, unplug Reclining Seat Power Cord. After 10-30 seconds, hold both Remote buttons for 5 seconds. When pairing, LED light flashes Teal. Plug Reclining Seat Power Cord into power outlet. Confirm successful pairing by extending the Footrest.

The LED light bar will turn teal when Reclining Seat is in use.

Your Reclining Seat is equipped with added safety features including a sensor within the Mechanism to avoid entrapment. If Footrest stops while closing and the remote is beeping, release the button. Remove any obstructions before continued use of Reclining Seat.

FCC COMPLIANCE STATEMENT


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

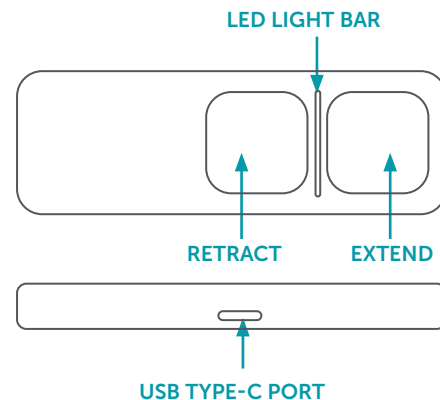

Troubleshooting

Troubleshooting

What if my Reclining Seat is not reclining?

Ensure Power Cord is plugged in securely at both ends to a power source and the Reclining Seat Mechanism. If plugged in correctly and there is still no motion when pressing the buttons on your remote, ensure your remote is charged.

What if I lose power while reclined?

If this happens, do not attempt to force the Footrest down. Do your best to exit the Reclining Seat safely and wait until power is restored to the Reclining Seat to retract the Footrest.

Why is my Clamp too tight or too loose?

The Reclining Seat Clamp comes with a Thumb Screw that is made specifically for connecting your Reclining Seat Frame to a Sactionals Side. If you used a non-Reclining Seat Clamp, it may wiggle and fall off. Clamps should not be used to connect Reclining Seat to adjacent Sactionals Seats or Reclining Seats. Only Shoes should be used. If your Clamp is too tight, refer to the videos on our how-to guide for tips on removal.

What if I drop something (like the Remote or a phone) inside the Reclining Seat Mechanism?

If this happens, make sure to remove the Power Cord from the wall before retrieving the item. Do not operate your Reclining Seat until it has been removed.

What if my Reclining Seat starts squeaking, rattling, or not functioning properly?

Check to make sure you have assembled the Reclining Seat correctly and that all attachments, latches, and locks are secured properly. Check power cord to ensure there is no exposed wiring. Check to make sure Reclining Seat Mechanism and Seat Frame are level and properly placed in Shoes and clamped together.

What if my Seat Cushion Cover doesn't fit?

Ensure you are using the Reclining Seat Cover by locating the "RECLINING SEAT" woven label on the bottom of the Cover.

What if my Seat Frame Lid doesn't fit?

If your Seat Frame Lid is not locking into place, ensure Lid is properly positioned on the Reclining Seat Mechanism hooks, and that there is nothing obstructing the lock on the front side of the Lid.

Why doesn't my Reclining Seat Mechanism Fit into the Reclining Seat Frame?

This may happen if your Reclining Seat Frame is not properly installed. To ensure your Frame is assembled properly, check that all pieces are properly connected and latches are secured.

Why did my Footrest stop retracting and extend back out?

Your Reclining Seat is equipped with added safety features including a sensor within the Mechanism to avoid entrapment. If anything is obstructing the Footrest while retracting, motion will reverse and the Remote will beep while flashing red. Remove all obstructions then resume normal operation.



Scan for setup videos & additional troubleshooting resources

If you have any other questions about these products, their installation, or their operation, please contact the Lovesac Customer Love Team at 1-888-636-1223 or support@lovesac.com. You can also visit www.lovesac.com for additional resources. For Lovesac warranty information please visit lovesac.com/warranty.

Need help?

Contact our Customer Love team

1-888-636-1223
support@lovesac.com
www.lovesac.com

LOVESAC
Designed for Life™ Furniture Co.